



Please distribute this notice to the following Individual(s) in your organization:

- Parts Manager
- Sales Manager
- Service Manager

Service Bulletin  
DSB-05182010


To: All Dynasys Dealers

Re: Required Wiring Change to HVAC Units (all serial numbers).

The addition of a timer on the PCB for the HVAC is being implemented to units in the field.

**Caution:** Before performing the following procedure make sure that all power has been disconnected from the unit.


1. Remove compressor cover from HVAC box.
2. Remove jumper between upper PCB connector to high side pressure switch.

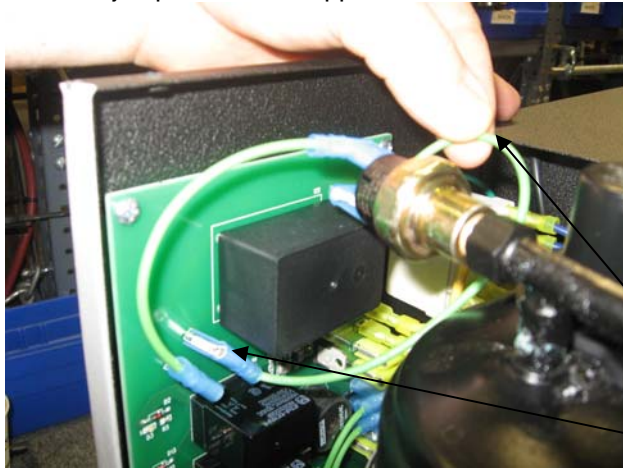

**JUMPER**

3. Connect green double-wire from time delay relay to high side pressure switch.
4. Connect green single wire from time delay to upper PCB connector.

5. Connect black (ground) wire from time delay relay onto screw behind potential relay.

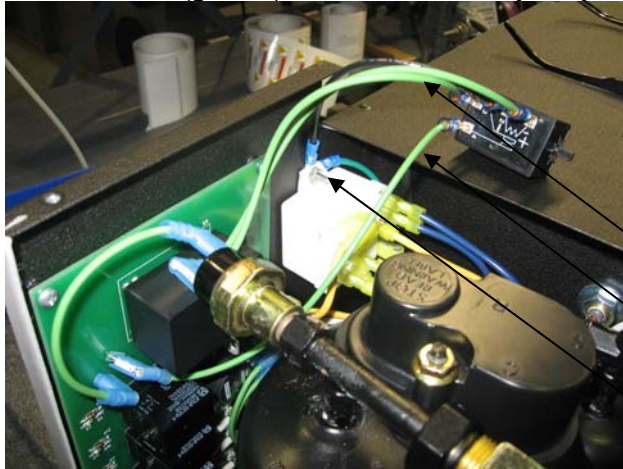

**Ground, Single, Double**

6. Apply a drop of adhesive to four corners of time delay relay.



7. Position relay in approximate location shown and hold until firmly attached to PCB.



**Relay Position**

NOTE: SRT for this Service Bulletin is .75 hours at published shop rate.

Hodyon LLP  
[www.hodyon.com](http://www.hodyon.com) [www.dynasysapu.com](http://www.dynasysapu.com)